

# Traditional Non-Woven Material Installation Guide

Please read this tutorial before you begin hanging your wallpaper to ensure you fully understand the installation process. If you have any questions, don't hesitate to contact our customer care team. They will be happy to help.

## Prepare the Wall:

For optimal adhesion and clean removal during future redecoration, the wall surface must be smooth, clean, dry, primed, structurally sound, and free of any stains.


Traditional non-woven material can be used on slightly textured walls.

There are numbers at the bottom of each panel, and starting from left to right, C1 or R1 goes first, and then C2 or R2, C3 or R3, and so on.

## How to Hang Wallpaper:

Re-roll your wallpaper so that the top is on the outside of the roll. Don't trim any part of the paper before hanging.

- Use an appropriate high-quality adhesive for your wall type. You can use regular powder wallpaper glue. Nothing special.
- Your wallpaper panels have numbers at the bottom. Check these numbers before you start hanging. You will see (C1 or R1, C2 or R2, and so on). Before gluing anything, lay out all the mural panels to make sure they are correct and in order.
- Apply glue to the wall. Hang the wallpaper. Gently smooth out the wallpaper using a plastic smoother to remove any air bubbles. If you notice any bubbles after the installation process, you can simply make a small hole with a needle and then press the air out.

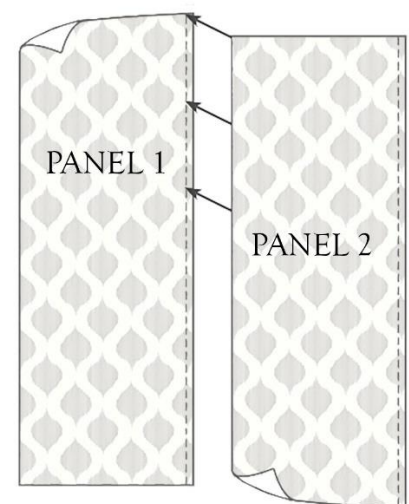

- The edges of the wallpaper will overlap a little so the pictures lines up. You can leave it like this or do the double-cutting to make a smooth edge. The link at the bottom shows how to do the double-cutting.
- Once you receive the product, you may notice some creases on the edges,

which will disappear once you do the double cutting.

- Use a clean cloth or sponge for cleaning any excess paste from the wall.

How to do double-cutting for a smooth edge

<https://www.youtube.com/watch?v=jdzpsQCLYME>